

Shelty Systems BuzzBox 2

Quick Start

- 1.Plug in one or more compatible buzzer paddles into your computer's USB ports.
- 2.Select **New Game** from the **File** menu.
- 3.The first button press on a buzzer paddle will cause it to light up and a sound effect to be outputted.
- 4.Press the RESET button at the bottom of the window to clear the lamp. The Spacebar and Enter keys work as shortcuts for the RESET button.
- 5.Adjust score as desired by pressing the increment and decrement buttons.
- 6.Repeat steps 3 and 4.

Menubar

File

New Game Begin a new game. The team scores are cleared to zero and pause mode is disabled if required.

Pause Game Mode The sound effect and first-press-lockout is disabled. This mode is useful to test the paddles and lamps.

Rescan for Controllers Perform a fresh scan for compatible USB buzzer devices.

Tools

Options - Open options window. See below.

Help

Contents Open help document window.

About BuzzBox 2 Show information about the application.

Scoreboard

Adjustment Value

The smaller number in the middle of the screen is adjusted by pressing the + and - buttons above and below the number.

Team Scores

Modify a team score up or down in increments of the Adjustment Value by pressing the up and down arrow buttons to the left and right of the Adjustment Value.

Options

Active Buttons

Toggle sensitivity to the different coloured buttons on the paddles.

Audio

Select the appropriate radio button to choose a standard buzzer sound effect or a sound file.

If a buzzer sound is chosen, the frequency and duration of the sound effect can be adjusted as desired.

If a WAV file is chosen, a PCM format *.wav file needs to be selected. Press the **Browse** button to open a file browser dialog to help select the file.

Use the **Sound Test** button to try the sound effect without exiting the Options window.

Scoreboard

Toggle the **Enable Scoreboard** checkbox to show or hide the scoreboard on the main screen.

The **Name** and **Colour** of the teams and their scores can be modified in the boxes to the right.

Reset

The reset button restores the factory option settings.

Save

The save button stores the settings and closes the window.

Cancel

This button reverses any pending changes and closes the window.